

ekinex

CONTROL YOUR LIVING SPACE

Modbus / KNX interface for RDZ air handling units

Code: EK-BO1-TP-RMA



Data sheet STEKBO1TPRMA_EN



Description

The ekinex® EK-BO1-TP-RMA interface is a modular KNX S-mode device that allows bidirectional communication between the RDZ air handling units, equipped with control board with RS-485 Modbus communication port, and the KNX system (TP). Thanks to the interface, the functions performed by the air handling units can be controlled and monitored by KNX devices. The unit has an integrated KNX bus communication module and is realized for mounting on a 35 mm rail. Power is supplied via the KNX bus.

Function

The interface represents a node on the KNX network and performs the Master function on the Modbus network to which the control board of the air handling unit is connected as the only Slave. The interface manages a bidirectional data flow between Modbus RTU (Remote Terminal Unit) and KNX. The Modbus registers are read cyclically and their value can be sent as a communication object on the KNX bus. The data update on the KNX network can take place cyclically and/or on variation event of the data acquired by the Modbus network. The interface acquires the value of KNX communication objects during the exchange of telegrams on the bus. The acquired value is converted and written on the appropriate Modbus register. The configuration is carried out by ETS by means of the corresponding application program.

RDZ supported air handling units

The interface supports RDZ air handling units for use in residential buildings listed in the following table.

Family	Function	Installation
CHR	Mechanical ventilation with heat recovery	Horizontal (ceiling)
WHR	Mechanical ventilation with heat recovery	Verticale (wall)
UAP PDC	Air renewal with dehumidification	Horizontal (ceiling)
UC	Air renewal with dehumidification	Horizontal (ceiling)

For more information on RDZ air handling units, MVHR and dehumidification systems, please refer to the corresponding catalogue and technical documentation on www.rdz.it.

Main characteristics

- Housing in plastic material
- Mounting on 35 mm rail (according to EN 60715)
- Protection degree IP20 (installed device)
- Safety class II
- Weight 70 g
- 2 modular units (1 unit = 18 mm)
- Dimensions 36 x 94 x 71 mm (WxHxD)

Technical data

Power supply

- 30 Vdc from KNX bus line
- Current consumption (from main bus line) < 13 mA

Environmental conditions


- Operating temperature: - 5 ... + 45°C
- Storage temperature: - 20 ... + 60°C
- Transport temperature: - 20 ... + 60°C
- Relative humidity: 5 - 95% not condensing

Switching, display and connection elements

The device is equipped with 3 signalling LEDs, a terminal for connection to the KNX bus line, a 3-pole screw terminal for connection to a Modbus RTU line, a pushbutton and a programming LED.

Switching elements

Pushbutton (B) for switching between normal operation and programming mode

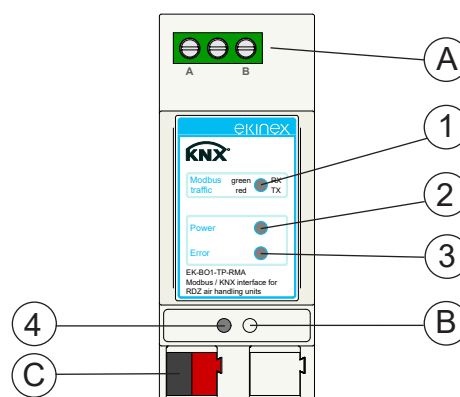

1. LED for Modbus traffic
 2. LED for device state
 3. LED for error signalling
 4. LED for KNX programming
- A. Modbus terminal block
B. Programming pushbutton
C. KNX terminal block


Display elements

- LED Modbus traffic (1)
 - red on: transmitting (TX)
 - green on: receiving (RX)
- LED power (2)
 - on: active device
 - off: not active device
- LED error (3)
 - on (fixed): the air handling unit configured in ETS does not correspond to the connected unit
 - on (blinking): communication error on Modbus line
- LED programming KNX (4)
 - display of the active mode: on = programming, off = normal operating


Mounting

The device has degree of protection IP20, and is therefore suitable for use in dry interior rooms. The housing is made for rail mounting according to EN 60715 in boards or cabinets for electrical distribution. The installation is in horizontal position, the correct position is when the KNX bus terminal is located at the bottom. For the installation of the device on the rail proceed as follows.


- with the aid of a tool bring the locking device in the fully lowered position (a);
- place the upper edge of the rear inner profile on the upper edge of the rail (b);
- rotate the device towards the rail (c);
- push the locking device upward until it stops (d).

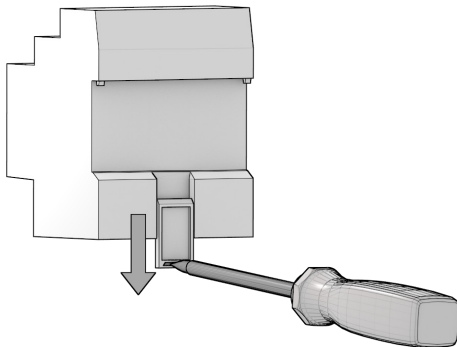


a

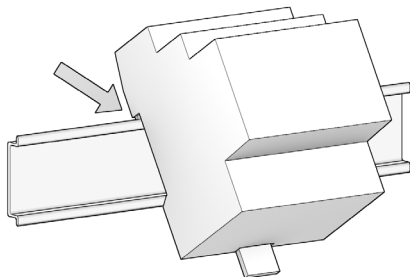

b

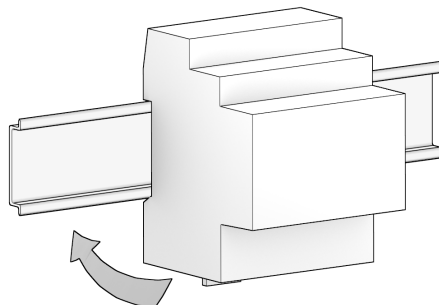

c

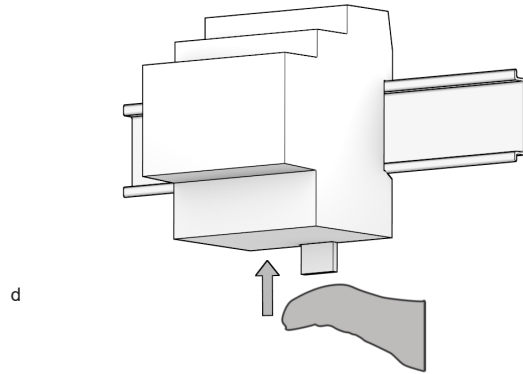

d

Before removing the device, be sure the Modbus cable has been disconnected and the KNX bus terminal has been extracted from its slot. Use a screwdriver to slide down the locking device and remove the device from the rail.



Note. When mounting the device in boards and cabinets it shall be provided the necessary ventilation so that the temperature can be kept within the operating range of the device.

Connection of the KNX bus line


The connection of the KNX bus line is made with the terminal block (red / black) included in delivery and inserted into the slot at the bottom of the housing.

Characteristics of the KNX terminal block

- spring clamping of conductors
- 4 seats for conductors for each polarity
- terminal suitable for KNX bus cable with single-wire conductors and diameter between 0.6 and 0.8 mm
- recommended wire stripping approx. 5 mm
- color codification: red = + (positive) bus conductor, black = - (negative) bus conductor



Warning! In order to supply the KNX bus lines use only KNX bus power supplies (e.g. ekinex EK-AB1-TP or EK-AG1-TP). The use of other power supplies can compromise the communication and damage the devices connected to the bus.

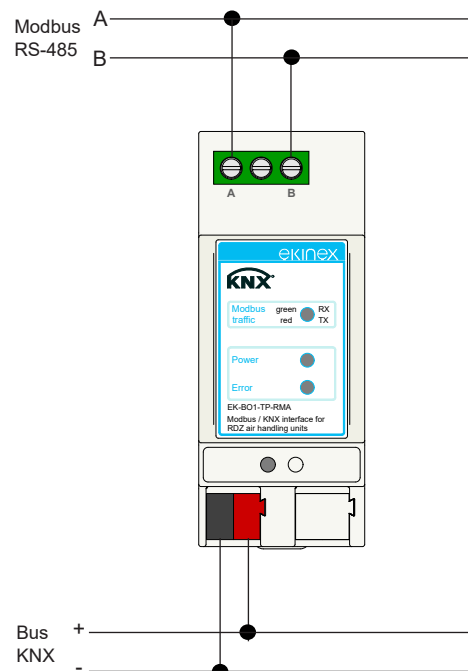

Connection of the KNX bus line

The connection of the KNX bus line is made with the terminal block (red / black) included in delivery and inserted into the slot at the bottom of the housing.

Characteristics of the KNX terminal block

- spring clamping of conductors
- 4 seats for conductors for each polarity
- terminal suitable for KNX bus cable with single-wire conductors and diameter between 0.6 and 0.8 mm
- recommended wire stripping approx. 5 mm
- color codification: red = + (positive) bus conductor, black = - (negative) bus conductor



Warning! The electrical connection of the device can be carried out only by qualified personnel. The incorrect installation may result in electric shock or fire. Before making the electrical connections, make sure the power supply has been turned off.

Configuration and commissioning

Configuration and commissioning of the device require the use of the ETS® (Engineering Tool Software) program V4 or later releases. These activities must be carried out according to the design of the building automation system done by a qualified planner.



Note. The configuration and commissioning of KNX devices require specialized skills. To acquire these skills, you should attend the workshops at KNX certified training centers.

Configuration

For the configuration of the device parameters the corresponding application program or the whole ekinex® product database must be loaded in the ETS program. For detailed information on configuration options, refer to the application manual of the device available on the website www.ekinex.com.

Code	Application program (## = version)
EK-BO1-TP-RMA	APEKBO1RMATP##.knxprod

Commissioning

For commissioning the device the following activities are required:

- make the electrical connections as described above;
- turn on the bus power supply;
- switch the device operation to the programming mode
- by pressing the programming pushbutton located on the front side of the housing. In this mode of operation, the programming LED is turned on;
- download into the device the physical address and the configuration with the ETS® program.

At the end of the download the operation of the device automatically returns to normal mode; in this mode the programming LED is turned off. Now the bus device is programmed and ready for use.

Reset of the device

To reset the device remove the bus connection by extracting the bus terminal from its seat. Keeping pressed the programming pushbutton, reinsert the bus terminal in his seat; the programming LED blinks fast. Release the programming button and remove the bus terminal again; the reset was carried out. Now you need to address and configure again the device via ETS.



Warning! The reset restores the device back to the state of delivery from the factory. The address and the value of the parameters set during configuration will be lost.

Marks

- KNX
- CE: the device complies with the Low Voltage Directive (2014/35/UE) and the Electromagnetic Compatibility Directive (2014/30/UE)

Maintenance

The device is maintenance-free. To clean use a dry cloth. It must be avoided the use of solvents or other aggressive substances.

Disposal



At the end of its useful life the product described in this datasheet is classified as waste from electronic equipment in accordance with the European Directive 2012/19/UE (WEEE), and cannot be disposed together with the municipal undifferentiated solid waste.



Warning! Incorrect disposal of this product may cause serious damage to the environment and human health. Please be informed about the correct disposal procedures for waste collecting and processing provided by local authorities.

Warnings

- Installation, electrical connection, configuration and commissioning of the device can only be carried out by qualified personnel in compliance with the applicable technical standards and laws of the respective countries
- Opening the housing of the device causes the immediate end of the warranty period
- In case of tampering, the compliance with the essential requirements of the applicable directives, for which the device has been certified, is no longer guaranteed
- ekinex® KNX defective devices must be returned to the manufacturer at the following address: Ekinex S.p.A. Via Novara 37, I-28010 Vaprio d'Agogna (NO)

Other information

- The instruction sheet must be delivered to the end customer with the project documentation
- For further information on the product, please contact the ekinex® technical support at the e-mail address: support@ekinex.com or visit the website www.ekinex.com
- KNX® and ETS® are registered trademarks of KNX Association cvba, Brussels

© Ekinex S.p.A. 2020. The company reserves the right to make changes to this documentation without notice.